RANK ARENA R1020

MODEL

SERVICE MANUAL

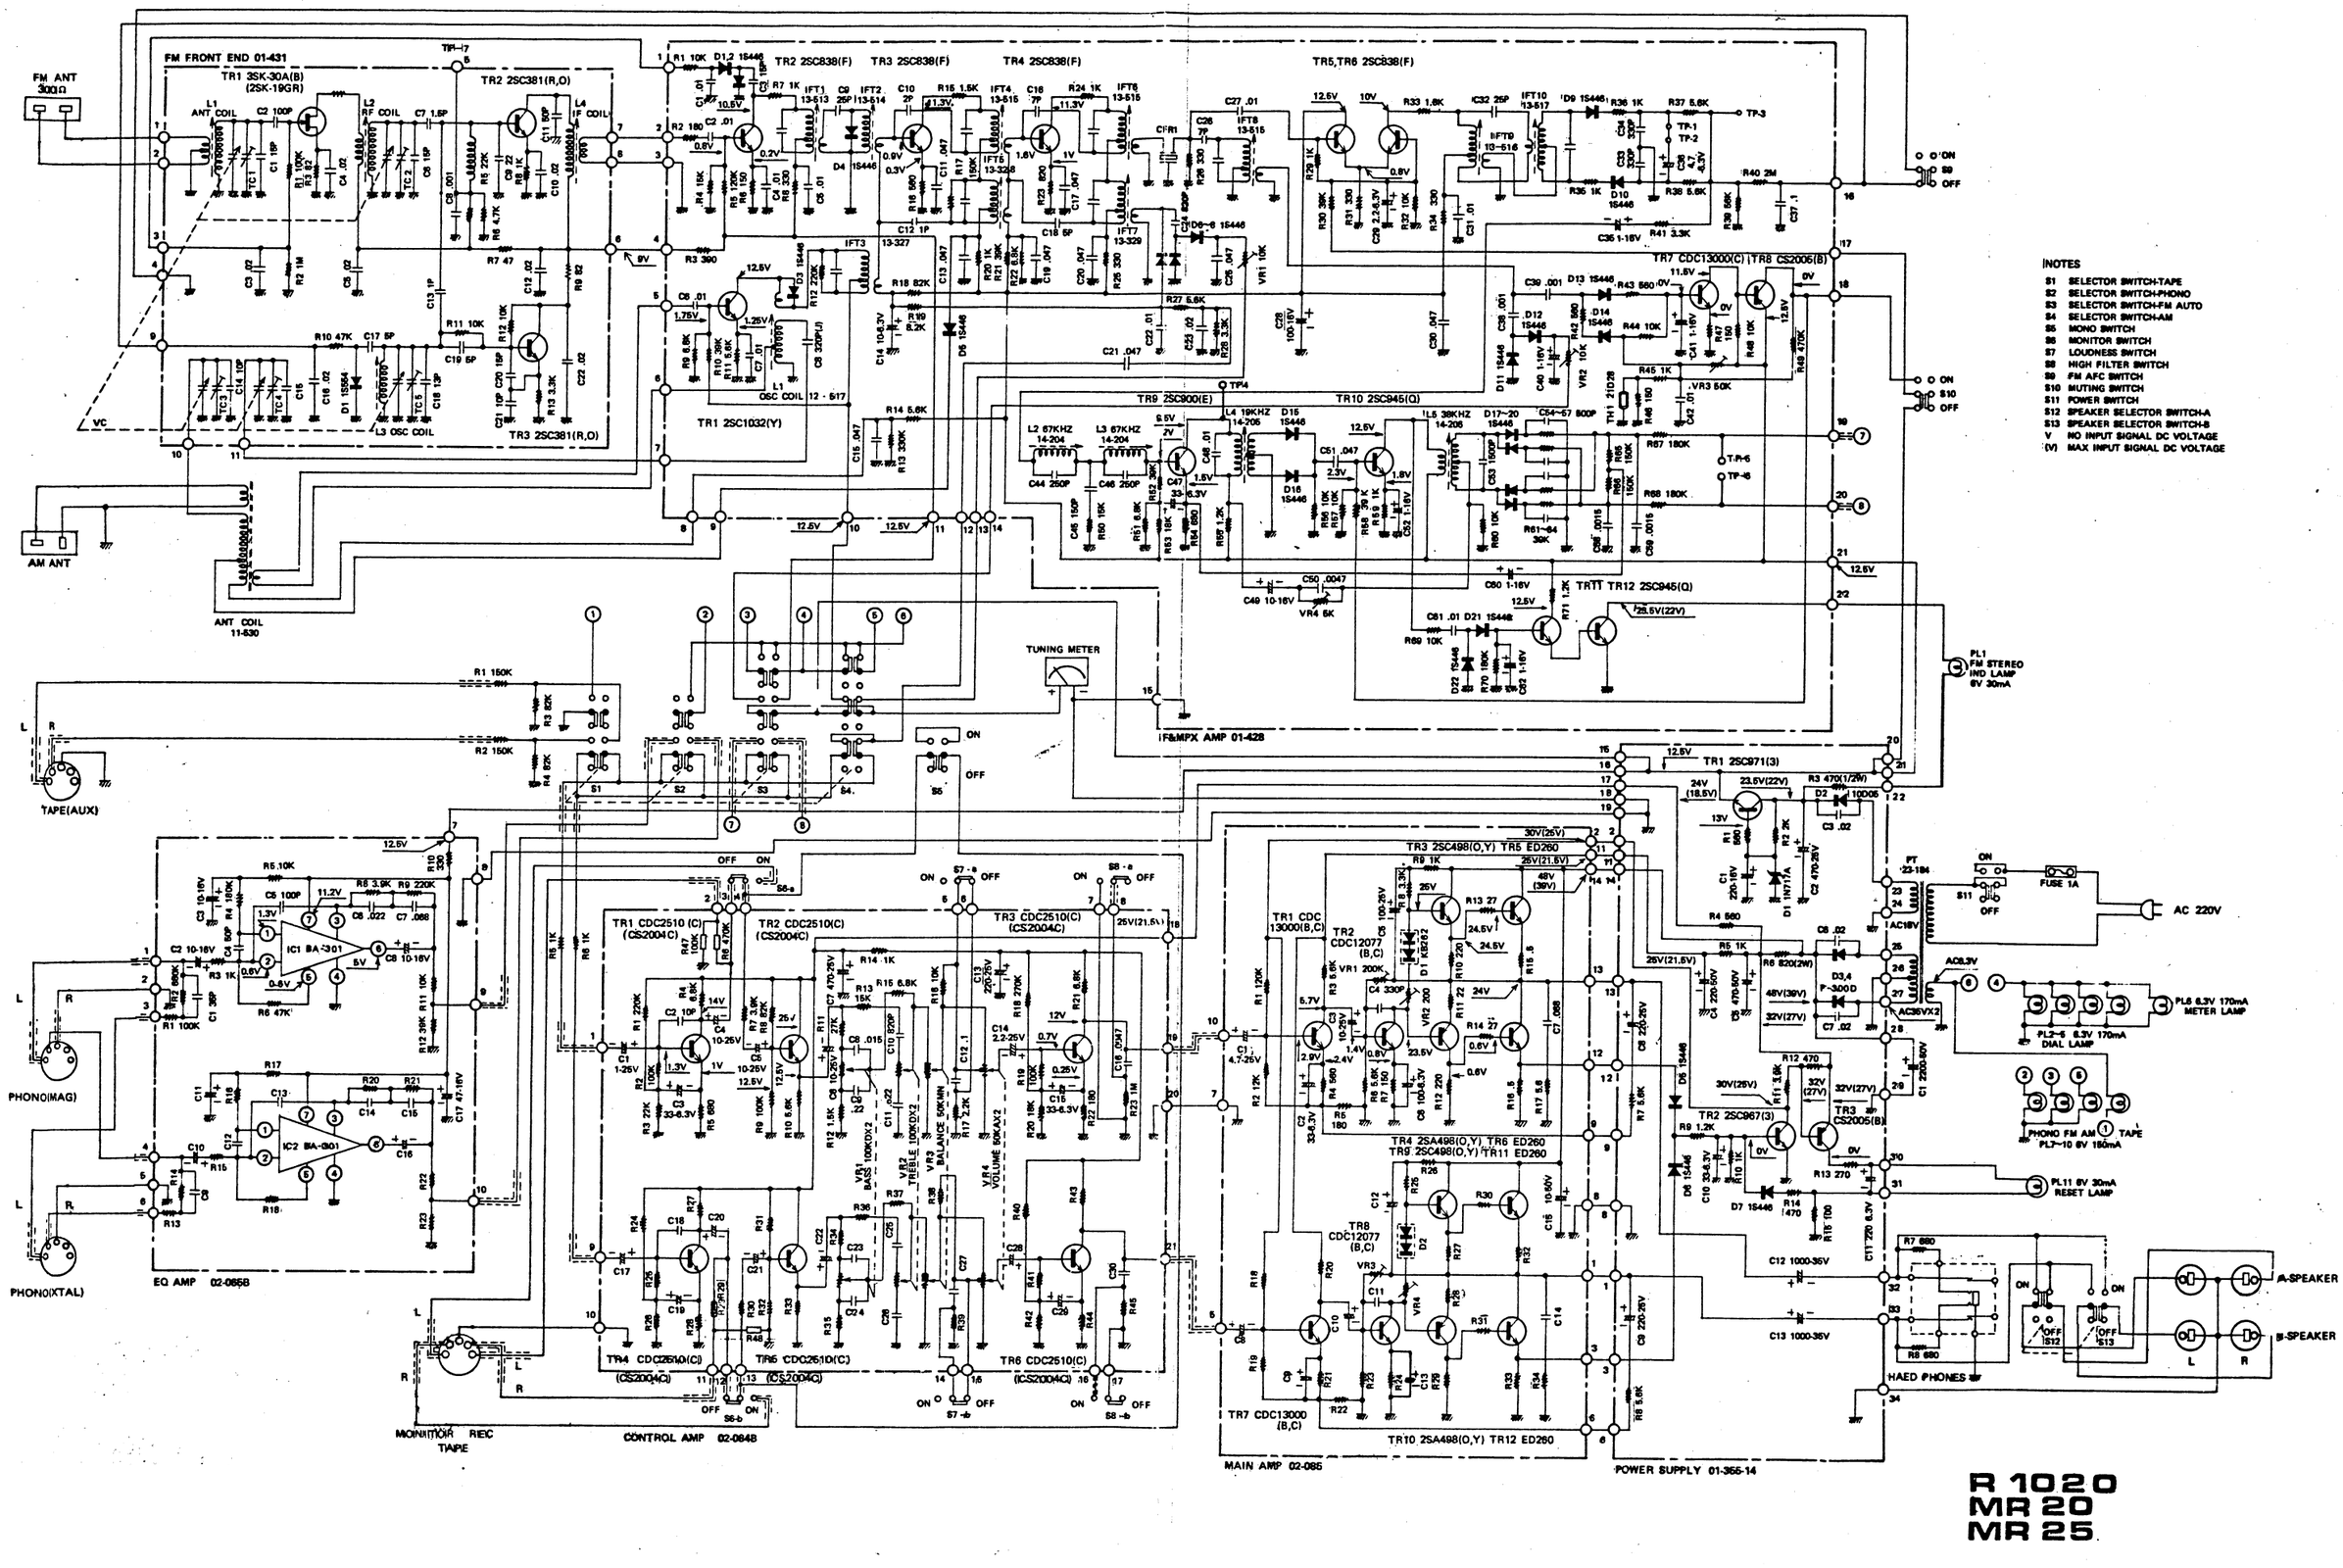

NOTES

- S1 SELECTOR SWITCH-TAPE
- S2 SELECTOR SWITCH-PHONO
- S3 SELECTOR SWITCH-FM AUTO
- S4 SELECTOR SWITCH-AM
- S5 MONO SWITCH
- S6 MONITOR SWITCH
- S7 LOUDNESS SWITCH
- S8 HIGH FILTER SWITCH
- S9 FM AFC SWITCH
- S10 MUTING SWITCH
- S11 POWER SWITCH
- S12 SPEAKER SELECTOR SWITCH-A
- S13 SPEAKER SELECTOR SWITCH-B
- V NO INPUT SIGNAL DC VOLTAGE
- (V) MAX INPUT SIGNAL DC VOLTAGE

R 1020
MR 20
MR 25